
REMOVAL

- BO2UA-01
- 1. w/ Front spoiler: REMOVE FRONT SPOILER (See page BO-4)
- (a) Remove the fender liner.
- (b) Remove the 3 nuts, screw and front bumper extension.

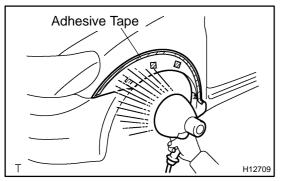

- 2. REMOVE FRONT FENDER WHEEL OPENING MOULDING
- (a) Remove the fender liner.
- (b) Remove the bolt and 3 screws.
- (c) Using a heat light, heat the moulding to 20 30°C (68 86°F).

NOTICE:


Do not heat the moulding excessively.

(d) Cut the adhesive tape with a knife.

NOTICE:

Do not damage the body.

(e) Remove the moulding.

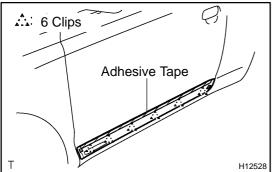

3. 2-Door vehicle:

REMOVE FRONT DOOR LOWER OUTSIDE MOULD-ING

(a) Using a heat light, heat the moulding to 20 - 30 $^\circ C$ (68 - 86 $^\circ F).$


NOTICE:

Do not heat the moulding excessively.

(b) Cut the adhesive tape with a knife.

NOTICE:

- If reusing the moulding, take care not to damage the moulding.
- Do not damage the body.
- (c) Remove the moulding.

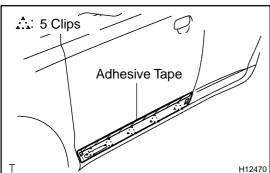

- 4. 4-Door vehicle: REMOVE FRONT DOOR LOWER OUTSIDE MOULD-ING
- Using a heat light, heat the moulding to 20 30°C (68 86°F).


NOTICE:


Do not heat the moulding excessively.


(b) Cut the adhesive tape with a knife.

NOTICE:

- If reusing the moulding, take care not to damage the moulding.
- Do not damage the body.
- (c) Remove the moulding.

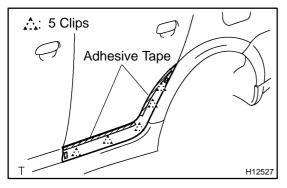

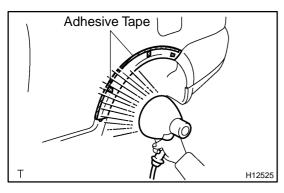

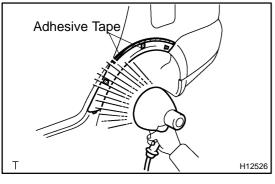

5. 4-Door vehicle:

REMOVE REAR DOOR LOWER OUTSIDE MOULDING

Using a heat light, heat the moulding to 20 - 30°C (68 - 86°F).

NOTICE:

Do not heat the moulding excessively.

(b) Cut the adhesive tape with a knife.

NOTICE:

Do not damage the body.

- (c) Remove the moulding.
- 6. 2-Door vehicle:

REMOVE QUARTER OUTSIDE REAR MOULDING

(a) Using a heat light, heat the moulding to 20 - 30 $^\circ C$ (68 - 86 $^\circ F).$

NOTICE:

Do not heat the moulding excessively.

(b) Cut the adhesive tape with a knife.

NOTICE:

Do not damage the body.

- (c) Remove the moulding.
- 7. 4-Door vehicle:

REMOVE QUARTER OUTSIDE REAR MOULDING

(a) Using a heat light, heat the moulding to 20 - 30° C (68 - 86° F).

NOTICE:

Do not heat the moulding excessively.

(b) Cut the adhesive tape with a knife.

NOTICE:

Do not damage the body.

(c) Remove the moulding.

2002 ECHO (RM884U)

8. w/ Side mudguard: REMOVE SIDE MUDGUARD

- (a) Remove the 4 bolts and side mudguard No. 2 retainer.
- (b) Remove the 3 bolts and screw.
- (c) 2-Door vehicle:

Using a heat light, heat the moulding to 20 - 30°C (68 - 86°F).

NOTICE:

Do not heat the moulding excessively.

(d) 2-Door vehicle:

Cut the adhesive tape with a knife.

NOTICE:

Do not damage the body.

(e) Remove the moulding.