

## INSTALLATION

### 1. INSTALL REAR AXLE BEAM

**Torque: 82 N·m (837 kgf·cm, 60 ft·lbf)**

#### HINT:

After adjusting the vehicle height by pushing down or lifting up the body, torque the 2 bolts.

### 2. INSTALL REAR COIL SPRINGS (See page [SA-53](#) )


### 3. INSTALL AXLE HUB ASSEMBLES (See page [SA-45](#) )

### 4. CONNECT ABS SPEED SENSOR WIRE HARNESS AND PARKING BRAKE CABLE CLAMPS

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

### 5. CONNECT BRAKE LINES

(a) Install the clip.

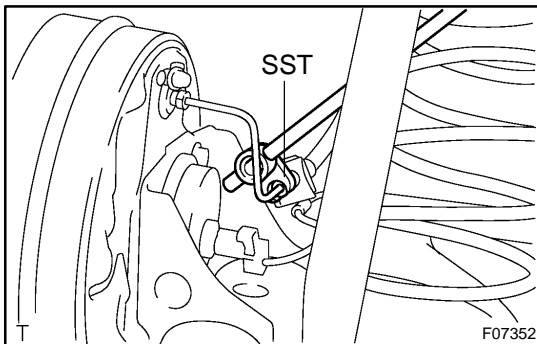

(b) Using SST, connect the brake line to the flexible hose.  
SST 09023-00100

**Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)**

(c) Employ the same manner described above to the other side.

### 6. BLEED BRAKE SYSTEM (See page [BR-4](#) )

### 7. INSTALL REAR WHEELS

**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**

### 8. CHECK ABS SPEED SENSOR SIGNAL (See page [DI-201](#) )