

INSPECTION

1. INSPECT POWER SOURCE VOLTAGE OF VAPOR PRESSURE SENSOR

- (a) Disconnect the vapor pressure sensor connector.

HINT:

Near the fuel tank.

- (b) Turn the ignition switch ON.
- (c) Using a voltmeter, measure the voltage between connector terminals 1 and 3 of the wiring harness side.

Voltage:

4.5 - 5.5 V


- (d) Turn the ignition switch to LOCK.

- (e) Reconnect the vapor pressure sensor connector.

2. INSPECT POWER OUTPUT OF VAPOR PRESSURE SENSOR

- (a) Turn the ignition switch ON.

- (b) Remove the fuel tank cap.

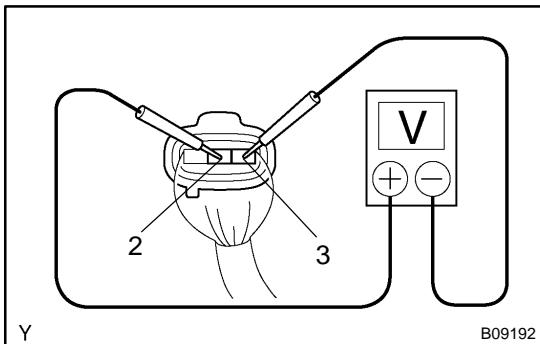

- (c) Connect a voltmeter to terminals 2 and 3, and measure the output voltage.

Voltage:

3.0 - 3.6 V

- (d) Reinstall the fuel tank cap.